

## Axis Tri LED DMX profile-version 1.0

DMX Channel	Function	Description	Value
1	Pan	Pan course	0-255
2	Tilt	Tilt course	0-255
3	Pan Fine	Pan fine	0-255
4	Tilt Fine	Tilt fine	0-255
5	Speed	Max speed (tracking mode)	0
		Max to min speed (vector mode)	1-244
		Changes	245-252
		Changes with pan and tilt movement	253-255
6	Control	Fan speed from fast to slow	0-127
		Reset (hold for 3 seconds)	140-150
		No Changes	151-255
7	Red LED	Red LED (0-100%)	0-255
8	Green LED	Green LED (0-100%)	0-255
9	Blue LED	Blue LED (0-100%)	0-255
10	Strobe	Strobe from slow to Fast	0-255
11	Macro	Red	1-19
		Green	20-39
		Blue	40-59
		Color Fade (Slow to fast)	60-79
		Color Snap (slow to fast)	80-99
		Random Color Fade (slow to fast)	100-119
		Fast Scroll	120-139
		Red Pulse	140-159
		Green Pulse	160-179
		Blue Pulse	180-199
		Yellow Pulse	200-209
		Purple Pulse	210-219
		Aqua Pulse	220-229
White Pulse	230-255		
12	Dimmer	Dimmer from off to full	0-255